 
 



Canon Digital Video Camcorder Instructions

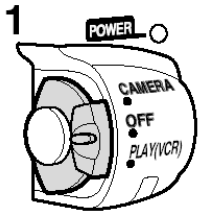


Turn on camera. Rotate power switch up to record. Rotate down to play back.

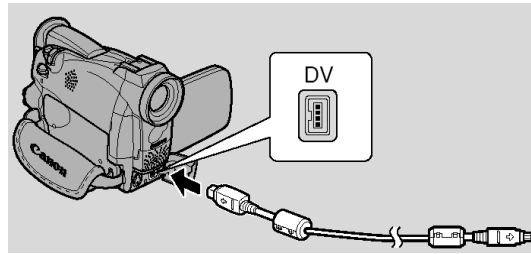

 
Connecting camcorder to a computer. Use Firewire cable (in camcorder bag) to connect to a computer with a Firewire port. Video capturing software is required to down video.

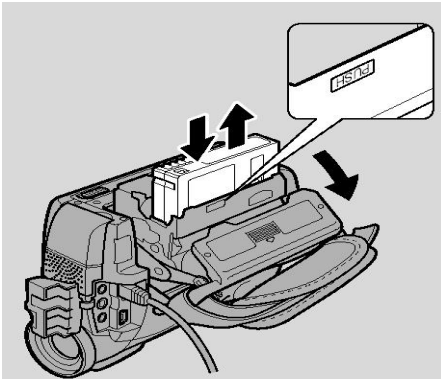


Tapes. Canon camcorders use MiniDV tapes. These tapes can be purchased from MDS.

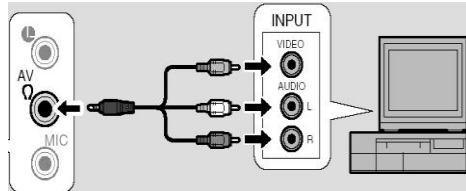

Connecting to a TV or DVD/VCR. Use the RCA cable (red, white, yellow) to connect.

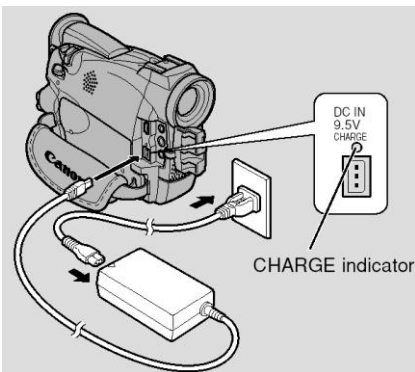

Charging the batteries. The batteries are charged in the camcorder. Turn power off and connect power adapter. Battery is charged when light is solid.

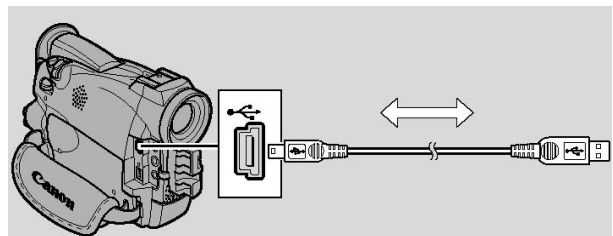

Digital still photos. Use the supplied USB cable to connect the camcorder to a computer.